


Setting the IAM Power Module Ground Jumper (460V)

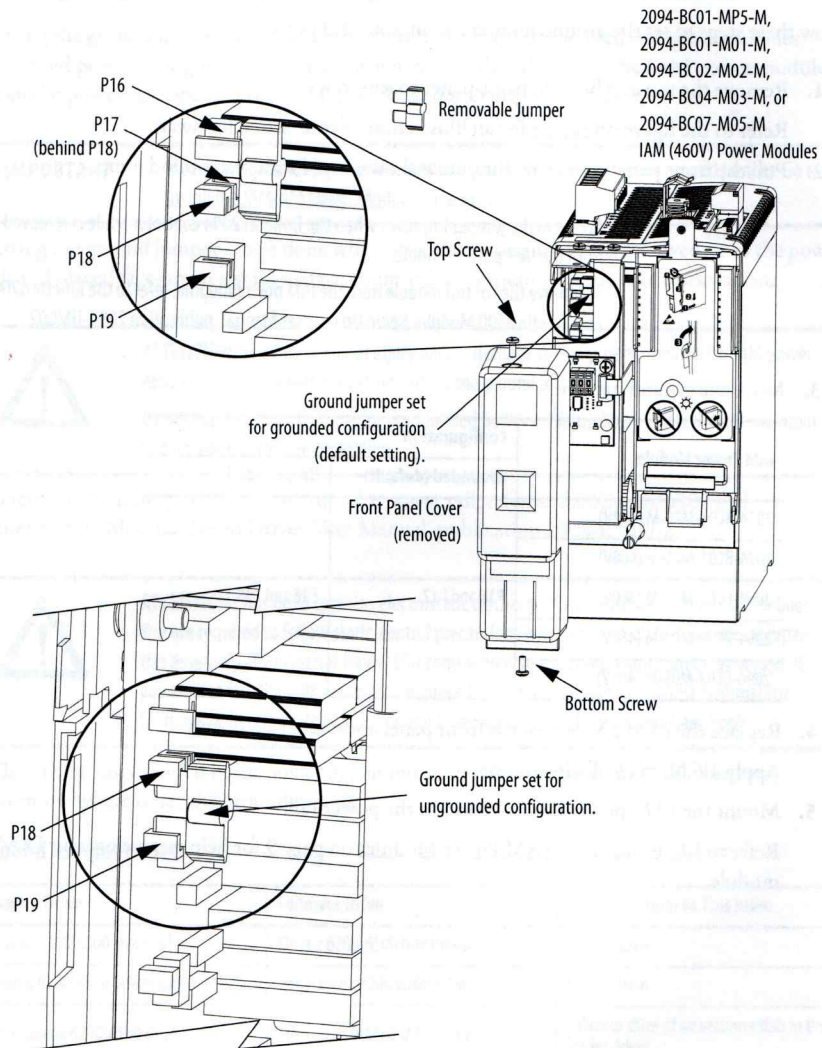

IMPORTANT

Use the default jumper setting for grounded power configurations. Move the jumper, as shown above, for ungrounded power.